



INSTRUCTION MANUAL

CARBON HEATER

Model - CH 3408





Dear Customer,

Congratulations!

Congratulations on the purchase of your new USHA Carbon Heater CH 3408

Innovatively designed, using only the highest quality material and components, your Usha Carbon Heater CH 3408 is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it Cautiously after reading for future reference.

Best Wishes

IMPORTANT PRECAUTIONS


For safety purpose you should read the instructions carefully before using the appliance for the first time and follow them. Save the instructions for future reference.

1. Remove all the packaging and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after sales service. Do not leave packaging materials like bags and staples within the reach of children.
2. Before switching on appliance check if the electrical Voltage and frequency of the circuit correspond to those indicated on the appliance.
3. Use the appliance only for the mentioned purpose, namely as a room heater for domestic use.
Do not use it for any for any other application as it could get dangerous.
4. The use of every electrical appliance calls for the awareness of some basic rules, such as:
 - Never touch the appliance with wet or damp hands or feet.
 - Never expose the appliance to atmospheric conditions (rain, sun etc.)
5. The appliance must always be placed on a flat and stable surface.
6. Switch the appliance off and unplug it before cleaning.
7. When the appliance is not in use switch it off and unplug it. Keep out of the reach of children.
8. Do not use the room heater near bath tubs, showers, wash-basins or swimming pools (minimum distance 1 meter)
9. Do not put the cable on the appliance when it is still warm.
10. A correct operation of the appliance is obtained when the room heater is installed vertically. Do not switch on the heater near pieces of furniture, curtains, shelves etc.
11. Do not use the appliance near liquids or inflammable matters.
12. Never operate the appliance immediately below an outlet.
13. **ATTENTION:** Do not connect the appliance to a device switching the appliance automatically on such as a thermal control device or a time switch to avoid overwhelming risks when the room heater is moved or covered.
14. Do not cover the appliance when it is running to avoid overheating risks.
15. Do not connect the appliance to extension cords or multiple outlets.
16. Do not damage and do not kink the power cord.
17. Before cleaning the appliance or carrying out any maintenance switch off the whole system.

If the appliance is not functioning, switch it off without tampering it. If any repair is required please contact Usha Care

PRODUCT DETAILS

Horizontal

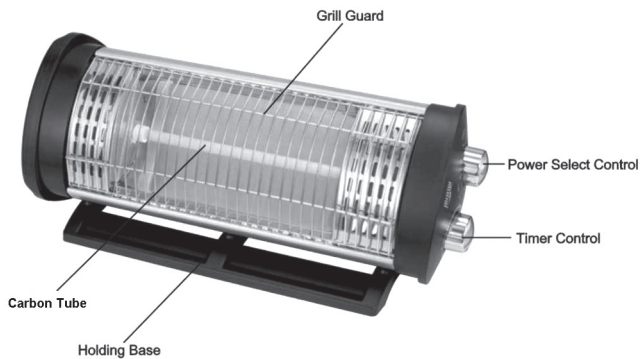

Upright



TECHNICAL DATA

Model No.	CH 3408
Power Supply	230V, 50HZ Single Phase
Wattage	800W
Power Select	400/800W
Heating Tube	1 No
Safety Device	2 Automatic tip-over protect
Timer	Max 180 Min
Colour	Black

DUAL POSITION FEATURE

Usha Carbon Heater is specially designed to be positioned either in horizontal or vertical position.



Note: To place the appliance in horizontal position, make sure the holding base is fully opened so that it is stable enough support the heating body.

OPERATION

1. Vertical Position

- Place the heater on a level surface in a stable upright position. Make sure the Power switch is in "OFF(0)" mode.
- Unwind the power cord and plug your heater into a standard domestic socket outlet.
- Turn the power switch to vertical mode in setting of 1 or 2, then turn the timer to the required time setting within 180 minutes, for desired heating time.
- After use, turn off the switch and pull out the power cord.
- Allow the unit to cool down before storage.

2. Horizontal Position

- Open the holder fully, then place the holder on a level surface. Make sure the Power switch is in "OFF(0)" mode.
- Unwind the power cord and plug your heater into a standard domestic socket outlet.



- Turn the power switch to Horizontal mode, then turn the timer to the required time setting within 180 minutes, for desired heating time.
- After use, turn off the switch and pull out the power cord.
- Allow the unit to cool down before storage.

Warning: When changing between the 2 positions, make sure to turn the power switch to “0” position before changing.

SAFETY DEVICE

This appliance is fitted with safety cut-off device that disconnects the appliance when the appliance is not in the right position. Always ensure that the unit is placed on a flat solid ground before operating.

TIMER

A 3 hour timer is built into the control panel, to set the desired time just turn the knob within 0 to 180 minutes range, for unlimited heating, turn the timer control to “on” position.

CARE AND CLEANING

- Before cleaning, ensure that the heater is switched off and is unplugged from the socket, allow it to cool thoroughly .
- Clean the exterior surface of the heater with a dry, soft cloth.
- Never use any form of detergent or solvents to clean the heater.
- Never spray with liquids or submerge in liquids or water.
- DO NOT attempt to clean the interior of the heater.
- DO NOT ATTEMPT TO OPEN THE CASE OF THIS HEATER at any time. There are no consumer serviceable parts inside the unit.
- When the heater is stored during off season, neatly wind the cord around the base of the heater to prevent any damage to the cord.

Note: In case of any defect do not tamper with the appliance yourself. Contact Usha Care.

WARRANTY CARD

This appliance is warranted for 1 year against all manufacturing defects from the date of sale. In the event of any complaint, please contact USHA Care at Toll Free No. 1800 1033 111.

The warranty is valid only when:

- 1) The appliance has been installed, used and maintained in accordance with the instruction manual.
- 2) The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
- 3) The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

- 1) Damages due to chipping, peeling, plating and denting.
- 2) Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
- 3) Normal wear and tear of parts.
- 4) Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied.

S.NO: _____

CASH MEMO _____ DATE: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

USHA care™

Toll free

1800-1033-111

USHA INTERNATIONAL LTD.

Plot No.15, Institutional Area, Sector 32, Gurgaon - 122 001 (Haryana) India, Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail: usha_care@ushainternational.com Website : www.ushainternational.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi (India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001:2008
Certified Company



Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

USHA

® Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



® Registered Trademark of USHA INTERNATIONAL LTD.