



INSTRUCTION MANUAL



POPOP TOASTER

Model: PT 3320



Dear Customer,

Congratulations!

You are now the proud owner of Usha Popup Toaster.

Innovatively designed, using only the highest quality material and components, your Usha Popup Toaster is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.


Best Wishes

IMPORTANT PRECAUTIONS

1. Read ALL instructions carefully.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. This appliance is not advised to be used by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless properly guided about the use of the appliance in a safe manner by the person concerned for their safety.
4. CAUTION: During operation the appliance heats up/becomes hot and it is therefore recommend avoiding touching the metallic parts of the appliance with bare hands. Buttons and knobs can however be used conveniently.
5. Please plug the pull of the appliance out if you do not intend to use the appliance, or in case of malfunction of the appliance.
6. Do not place this appliance on or near a hot gas cooker or a heated oven. Keep the power cord away from hot surfaces.
7. Operate the toaster at a safe distance from curtains or any combustible objects.
8. When the bread is stuck unplug the toaster. Then use tongs to remove the bread. Be careful not to damage the heating wires and rendering the toaster inoperable.
9. Take care that the bread slices stick out slightly from the toaster when filling it. Doing this makes it is easier to remove the toast.
10. The toaster is not suitable for preparation of sandwiches with fillings. ONLY toast bread slices, therefore.
11. Do not immerse any part of this appliance in water or any other liquid.
12. In order to remove the crumbs, remove the crumb tray at the bottom of the appliance. Do not use toaster without crumb tray.
13. Pull the plug out from socket only by using the plug, not by pulling the cable.
14. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If the supply cord is damaged, it must be replaced by the company authorized service centre or its service agent.
15. Before storing the appliance let it cool down. Then pull the plug out from socket.
16. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
17. Do not let the cord hang over edge of table or counter, or touch hot surface.
18. Do not use the appliance for other than its intended use.
19. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
20. Use the appliance on a level and stable work surface.
21. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
22. Do not attempt to dislodge food when toaster is in operation

HOUSEHOLD USE ONLY

PRODUCT INTRODUCTION

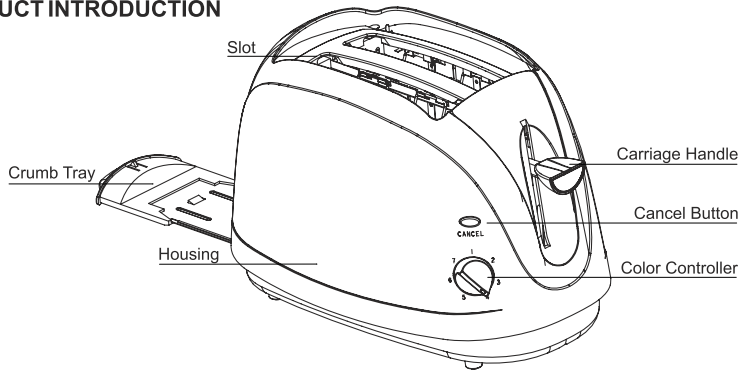

KEY FEATURES

1. **Variable browning control** – The color controller knob in the labeled diagram above allows the user to get the desired crispiness of toast. Some users may like to have crispy brown toasts while some may like it softer and less brown. Usha Popup Toaster allows user to get desired crispiness up to the maximum, 7 levels.
2. **Dust Cover** – This Usha Popup Toaster comes with a dust cover to prevent dust particles, insects or any other unwanted substances to enter inside the bread toasting slots, allowing them to be clean and hygienic.
3. **Easy to clean slide out crumb tray** – Usha Popup Toaster comes with an easy to remove and clean bread crumbs collected due to toasting.
4. **Automatic bread centering** – The appliance automatically centralizes bread toasts in the slots which ensures even toasting of bread.
5. **Mid cycle cancel function** – A Mid cycle cancel function allows user to withdraw the bread being toasted from the slots at any point of time when the bread is being toasted.

TECHNICAL SPECIFICATIONS

Mains Voltage:	230 V, 50 Hz
Power:	800 W

FOR THE FIRST USE

In the early periods of usage the appliance may emit odor due to presence of manufacturing residue, oil or the heating element. Do not be alarmed as it is normal and will not occur after a few usages. For the initial usage periods of the appliance please follow the below mentioned procedure.

OPERATING INSTRUCTIONS

Maximum two regular slices can be inserted in the toaster. Insert the slices in the bread slots. Before starting toasting ensure that the crumb tray is completely positioned in place before using. Plug the power cord into the outlet. Set the color controller to your desired color. The lowest is set white and the highest is dark. The middle position can toast the bread to golden color.

Note:

- 1). Toasting color for one slice is darker than that for double bread at the same level.
- 2). If toasted continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level.
- 3). During the toasting process, you may observe the toasting color. If you feel the browning is satisfactory, you can press the Cancel button to cancel the operation at any time.

Press carriage handle down vertically until it is positioned in place, and the indicator of Cancel will be illuminated. The appliance will begin at once. Once the bread has been toasted to the preset color, the carriage handle will be automatically pop up.

CAUTION

1. If during operation the appliance starts to slightly emit smoke, Press Cancel to stop toasting immediately.
2. Remove all protective wrapping prior to placing in toaster.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Please ensure to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice. Irregular bread or round bread cannot be toasted in the bread slot.

CLEANING AND MAINTENANCE

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.



WARRANTY CARD

This appliance is warranted for 2 years against all manufacturing defects from the date of sale. In the event of any complaint contact the nearest Company Service Centre or call our Toll Free number 1800 1033 111.

THIS WARRANTY IS VALID ONLY WHEN

1. The appliance has not been opened or tampered with, by any unauthorized person.
2. The warranty card or cash memo duly signed by the authorized dealer is presented with the complaint.
3. The appliance has been installed, used and maintained in accordance with the instruction manual.

THIS WARRANTY DOES NOT APPLY FOR

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN, and such plastic, materials, rubber parts and cord.
3. Normal wear and tear of the parts of the appliance.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied

S.NO: _____

CASH MEMO: _____ DATE: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

USHA care™

Toll free
1800-1033-111

Email: usha_care@ushainternational.com
 <http://www.facebook.com/ushainternational>

USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurgaon - 122 001, Haryana (India) Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail : usha_care@ushainternational.com Website : www.ushainternational.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi (India) Tel : +91 11 23318114 Fax : +91 11 23318118



SHRIRAM

Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

USHA

® Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



® Registered Trademark of USHA INTERNATIONAL LTD.

ISO 9001:2008
Certified Company