



INSTRUCTION MANUAL

OVEN TOASTER GRILLER WARMER

OTGW 2623R / 2628R / 2735R



Dear Customer,

Congratulations!

You are now the proud owner of Usha Oven Toaster Griller Warmer.

Innovatively designed, using only the highest quality material and components, your Usha Oven Toaster Griller Warmer is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes

IMPORTANT PRECAUTIONS

1. Read all the instructions.
2. Do not touch hot surfaces, always use handle or knobs.
3. Close supervision is necessary when any appliance is used near children.
4. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Usha care.
7. The use of accessories/ attachments not recommended may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner.
9. When operating the oven, keep at least four inches of free space on all sides of the oven for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
11. To disconnect, turn the time to OFF, then remove the plug. Always hold the plug, and never pull the cord.
12. Extreme caution must be used when moving a drip pan containing hot oil or other hot liquids.
13. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
14. Do not cover baking tray or any part of the oven with metal foil. This may cause the oven to overheat.
15. Do not clean inside of the oven with metal scouring pads, which can touch electrical parts, creating a risk of electric shock.
16. Oversized foods or metal utensils must not be inserted in the oven as they may cause fire or risk of electric shock.
17. A fire may occur if the oven is covered or on coming in contact with any flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
18. Extreme caution should be exercised when using cooking or baking container made of anything other than metal or oven proof glass.
19. Be sure that nothing touches the top or bottom elements of the oven.
20. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.

21. Always wear protective, insulated oven gloves while placing or removing items from the hot oven.
22. This appliance has safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Glass can still break around edges. Avoid scratching door surface or nicking edges.
23. Do not use appliance for other than intended use.
24. This appliance is for HOUSEHOLD USE ONLY.

IDENTIFICATION OF PARTS


OTGW 2623R / OTGW 2735R

1. Temperature control
2. Heating control (Switch)
3. Timer
4. Indicator light
5. Bake tray
6. Wire rack
7. Rotisserie set
8. Stainless steel door handle


OTGW 2628R

1. Temperature control
2. Heating control (switch)
3. Indicator light
4. Rotisserie function
5. Timer
6. Bake tray
7. Wire rack
8. Rotisserie set
9. Stainless steel door handle

2623 R

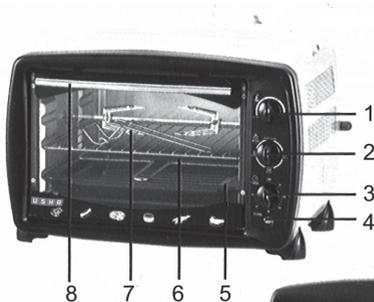

2735 R

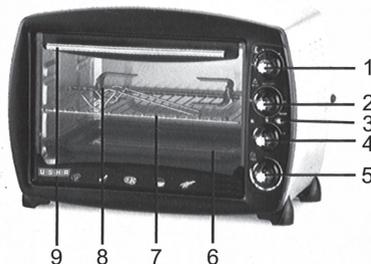

2628 R

TECHNICAL DATA

Model No.	OTGW 2623R	OTGW 2628R	OTGW 2735 R
Wattage	1600W	1600W	1800W
Power	230 V AC 50Hz, Single phase		
Capacity	23 litres	28 litres	35 litres

INSTRUCTIONS BEFORE FIRST USE

Before using your toaster oven for the first time, be sure to:

1. Read all instructions included in the manual.
2. Make sure that oven is unplugged and the time control is on the "OFF" position.
3. Wash the accessories in hot soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven, plug oven into outlet and you are ready to use your new toaster oven.
5. After re-assembling your oven, we recommend that you run it at the highest temperature on the toast function for approximately 15 minutes to eliminate any packing residue. This will also remove all traces of odour initially present.

Please Note: Initial start-up operation may result in minimal smell and smoke. This is normal and harmless. It is due to burning of the protective substance applied to the heating element.

USING YOUR OTGW

1. Temperature control: Choose the desired temperature from 100°C to 250°C for cooking.
2. Function control: this oven is equipped with four position for a variety of cooking needs:

-  : The heater not working
-  : GRILL Upper heating element working + rotisserie working, fit for broil, fish, steak, poultry, pork chops
-  : TOAST Upper heating element and lower heating element working + rotisserie working fit for toast break, muffins, frozen waffles, etc.
-  : BAKE Lower heating element working, fit for bake, pies, cookies, poultry, beef, pork etc.

3. Time Control: Turn the control to right (clockwise). This function has “bell rings” at the end of programmed time.

HOW TO USE ROTISSERIE FUNCTION

1. Set the thermostat control to chosen position.
2. Set the function control. Insert the pointer end of SPIT through skewer, making sure the points of skewer face in the same direction as pointed end of the spit. Slide skewer towards square of the spit and secure with thumbscrew.
3. Place food to be cooked on the spit by running the spit directly through the centre of the food.
4. Place the second skewer into the other end of the roast of poultry and secure skewer with the thumbscrew.
5. Check if the food is centered on the SPIT or not.
6. Insert the point end of the spit into the DRIVE SOCKET. Make sure the square end of the spit rests on the spit support.
7. Turn the time control to the chosen position.
8. When complete, the bell will ring.
9. Remove the spit by placing the hooks of the rotisserie handle under the grooves on either side of the spit. Lift the side of the spit first by lifting it up and out. Then pull the spit out of the drive socket and carefully remove roast from the oven. Take the meat off, of the spit and place on cutting board or platter.

GRILLING

For best results, it is recommended that you preheat for 15 minutes on 250°C.

Operation

- Turn function switch to 
- Preheat the oven.
- Place food on the wire rack and slide into the top rack.
- Food should be placed as close as possible on the heating element without touching it.
- Set temperature control to appropriate temperature.
- Brush food with sauces or oil, as desired.

- Turn time control to moderation position. When grilling is complete the bell will ring.
- It is advisable to leave the door slightly open.

TOAST

Operation

- Set the temperature control 250°C
- Turn the function control to 
- Place food to be toasted on the wire rack.
- Turn the time control to desired scale.
- Bell will ring to signal the end of the toast cycle.

Note: Wire rack should be positioned in the middle of the oven with the indentations pointing down.

BAKE

Operation

- Place the wire rack in the lowest or middle rack support.
- Place food to be cooked on the wire rack.
- Turn the function control to 
- Turn the Time Control to moderation position. When grilling is complete the bell will ring.

NOTE: When using a single wire rack, position Wire Rack in the lowest Support Guide.

MAINTENANCE AND CLEANING

1. Disconnect the oven by taking out plug from the outlet.
2. Always clean the dyed and enamelled parts of the oven after every use. Keep the oven open to let it dry.
3. Ensure that all acidic materials (lemon or oil) are cleaned immediately.
4. The oil tray and grill shells can be cleaned with detergent and water. Preferably use dry cleaning powders to clean inner & outer sides of the oven.
5. If supply cord is damaged, it must be replaced to avoid a hazard.
6. Danger: Electrical appliance must only be required by company service specialists. In case of repair, Contact Usha Care.

NOTES

NOTES

WARRANTY CARD

This appliance is warranted for 1 year against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at Toll Free No. 1800 1033 111.

The warranty is valid only when:

- 1) The appliance has been installed, used and maintained in accordance with the instruction manual.
- 2) The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
- 3) The appliance has not been opened or tampered with, by any unauthorized person.

This warranty does not apply for:

- 1) Damages due to chipping, peeling, plating and denting.
- 2) Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
- 3) Normal wear and tear of parts.
- 4) Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied.

S.NO: _____

CASH MEMO _____ DATE: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

USHA care™

Toll free

1800-1033-111

usha_care@ushainternational.com

USHA INTERNATIONAL LTD.

Plot No.15, Institutional Area, Sector 32, Gurgaon - 122 001 (Haryana) Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail : corporate@ushainternational.com Website : www.ushainternational.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi(India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001:2008
Certified Company



Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

USHA

® Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



® Registered Trademark of USHA INTERNATIONAL LTD.