


PART FIGURE

- A. BODY
- B. FRONT BASE
- C. REAR BASE
- D. BASE CLIP
- E. POWER CORD

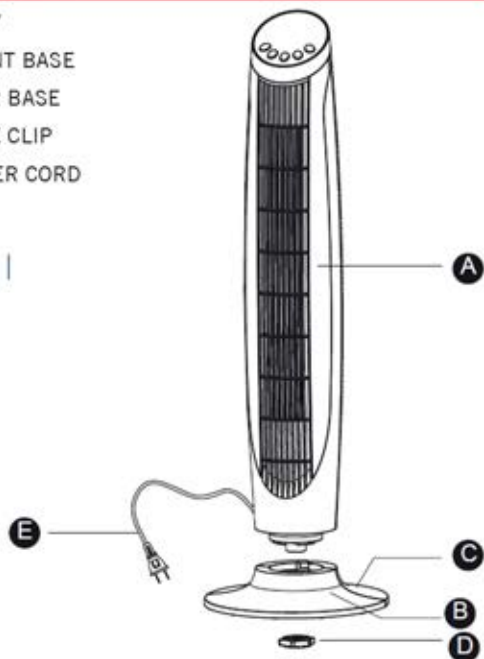






ASSEMBLY INSTRUCTIONS

1. Pull power cord (E) out slightly.
2. Put front base (B) onto rear base (C) and join them together.
3. Put the round base on the body (A) by inserting the cylinders under (A) to blind holes on the round base as shown on diagram.
4. Fix (A) with base clip (D) as shown.

SAFETY GUIDELINES

1. Read the instructions carefully since they give important indications concerning safety during installation use and maintenance.
2. Check the condition of the appliance after removing from the packaging. Ensure that all parts of the fan are within the packaging and have not been damaged.
3. Never leave any part of the packaging within reach of children.
4. This appliance must only be used for the purpose for which it was designed i.e. for room ventilation. **DO NOT USE IN BATHROOMS.**
5. Never insert any objects into the air Outlet or air Inlet of the fan.
6. To protect against electric shock, do not touch the appliance with wet or damp hands.
7. Never pull the cable or the appliance itself in order to disconnect the plug from the socket.
8. Before carrying out any cleaning or servicing operation, always remove the plug from the socket.
9. Insert the plug in to the power socket only after the fan is properly assembled and installed.
10. Always unplug first, before going out.
11. In the event of appliance failing to operate all repairs must be undertaken by a company approved service center.
12. This fan should not be operated with an inverter.
13. **ALWAYS KEEP THIS INSTRUCTION MANUAL & WARRANT CARD IN A SAFE PLACE.**
14. If the supply cord is damaged it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety

OPERATING INSTRUCTION

1. Press this key  to turn the fan on/off. The fan starts at the low speed.
2. After turning the fan on, press this key  to desired fan speed. 1 - Low, 2-Medium, 3-High.
3. This key  is a selector key for wind type. The wind type changes in the sequence from NATURAL-SLEEP
4. Press this key  repeatedly to set the time for air delivery. Increase in increments up to 8 hours.
5. This key  serves to start or stop the fan oscillation



INSERT BATTERIES (Battery not included)

1. Press down on the battery compartment cover of remote and slide it out.
2. Insert the batteries, making sure that the positive terminals are facing the proper direction marked inside the battery compartment
3. Close the cover by sliding it in.

Notes:

- 1) Use 2 "AAA" batteries (NOT INCLUDED).
- 2) Do not mix old and new batteries.
- 3) Do not mix alkaline, standard (carbon-line) or rechargeable (nickel-cadmium) batteries.

CLEANING AND MAINTENANCE

- Always unplug the fan before cleaning.
- Do not allow water and steam to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene.
- Wipe all parts with a soft cloth.
- Dry all parts completely before reassembling or reconnecting the fan.
- Keep surfaces dry and clean for a longer-lasting finish.

TERMS

Usha international Ltd. (herein referred to as the Company) hereby warrants that the product you have purchased from an Usha Company showroom or Usha distributor, or Usha retailer, or Usha vendor to be free from manufacturing defect in material used, workmanship and manufacture and consistent with the established and generally accepted standards under the conditions provided by these Terms under normal use.

This Usha product has a warranty against manufacturing defects for a period of One Year from the date of original purchase. Your sale receipt is proof of purchase of the product and the warranty period commences from that date. The said warranty shall be provided against the presentation of the sale receipt or duly filled and stamped warranty card with date of purchase.

This warranty is valid only when the failure of the product does not arise due to use for any unintended purpose. A defective product/part will be repaired within the warranty period provided it is properly packed.

Company's list price will be charged for worn out or broken parts not covered under warranty. Claims for missing parts should be made/notified within a specified time period (within 30 days from the date of delivery or as the company may deem fit) exceeding which the claim shall stand denied.

THE ABOVE WARRANTY SHALL NOT APPLY

1. If installation of the fan is not done as per the printed instructions accompanying the fan.
2. For normal wear and tear, product damage due to improper cleaning using chemicals by user. Peeling off or any other damage to the painted or plated metalized or plastic parts.
3. For the damage resulting due to fan installed or used in abnormal environment (sultry, excessive humid conditions, high ambient temperatures) or due to water leakage/seepage from the ceiling/walls.
4. For humming noise generated due to usage with an electronic regulator.
5. For the damage resulting due to usage of power supply other than 230 volts, 50 Hz AC mains.

THIS WARRANTY IS IN LIEU OF ALL OTHERS EXPRESSED OR IMPLIED AND DOES NOT COVER

1. Modification of product not authorized by Usha.
2. Improper use.
3. Change in factory settings of the product.
4. Accident and damage.
5. Usage other than as prescribed by the user manual.
6. Fire, flood, and other act of god.

The company will not be responsible for delay in servicing due to any unforeseen circumstances (e.g. communal tension, natural disasters like floods, cyclone etc) reasons for which would be beyond the control of the company.

Any failure of the product to perform any purpose other than the intended purpose shall not be considered as a default under this warranty.

The company will not be responsible for defects arising other than that of defective parts and/or arising out of usage other than as stipulated in the user manual or if the claim falls outside the warranty terms.

Except for warranty set forth herein the company, until prohibited under the prevailing law, disclaims all other warranty statutory, express or implied.

The warranty provided herein is towards the original purchaser and is not transferable to any third party.

In any event, if the company becomes liable for damages incurred in connection with this agreement, then the liability of the company will be limited to the amount equal to the sale invoice amount paid by you.

LOOK FOR HOLOGRAM FOR GENUINENESS

Every genuine fan has a unique hologram sticker. A hologram sticker is different from an ordinary sticker. Our unique hologram has following features, which are visible and you can check and ensure that you are buying a genuine Usha product.



'Usha' contracts/expands when hologram is seen from different angles.



'Usha' logo shows different colours when seen from different angles.



Small text of 'Genuine' and 'Usha' visible by 1x10 a small hand held lens



Flying bird with moving wings are seen when viewed from different angles.



Lines show multi colour movement, contracts and expand when seen from different angles.



2D/3D dimensional depth seen in USHA logo.