INSTRUCTION MANUAL

NUTRICHEF CITRUS JUICER

Model: JC 3420

Dear Customer,

Congratulations!

You are now the proud owner of Usha Citrus Juicer.

Innovatively designed, using only the highest quality material and components, your Usha Citrus Juicer is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes

IMPORTANT PRECAUTIONS

This appliance corresponds to accepted technological standards with regards to safety. Nevertheless, we consider it our obligation to make you aware of the following safety instructions.

1. Read all instructions.
2. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. To protect against electrical shock, do not immerse base or plug in water or any other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate the appliance with a damaged cord or plug or if the appliance malfunctions or has been damaged in any manner.
8. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
9. Do not use outdoors.
10. Do not let cord hang over the edge of a table or hot surface.
11. Do not use the appliance for anything other than its intended use.
12. The appliance is intended for household use only and not for commercial or any industrial use.
13. This appliance is not advised to be used by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless properly guided about the use of the appliance in a safe manner by the person concerned for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
16. Switch off the appliance before changing accessories or approaching parts which are moving while the appliance is operating.
17. Save these instructions for future reference.

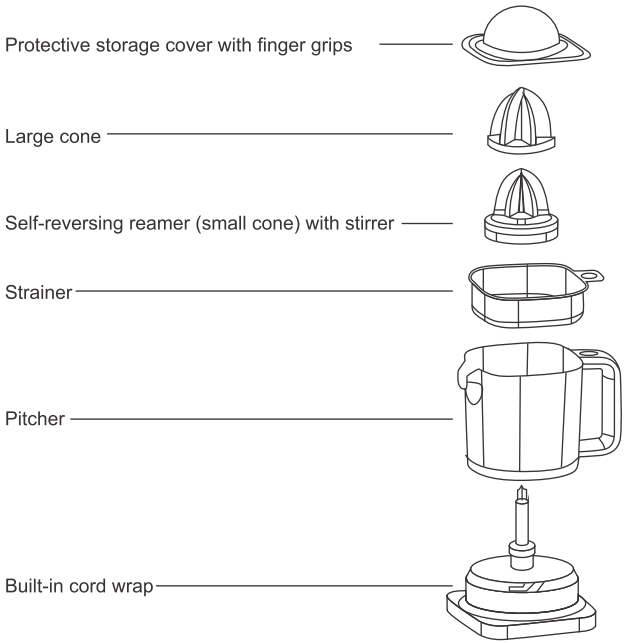

TECHNICAL SPECIFICATIONS

Mains Voltage:	220 ~ 240 V, 50 Hz
Power:	30 W
Capacity:	500 ml

OPERATING INSTRUCTIONS

1. Remove the storage cover. Unwind the cord and plug into a standard electrical outlet.
2. There are 2 cones for different sized fruit. The small cone works well with lemons and limes. Place the large cone over the small one to use with oranges or grapefruits.
3. Cut the fruit in half crosswise. Place the cut side of one half down over the Reamer. Using moderate to firm pressure, press the fruit down to start the juicing action. For your convenience, there are measurements in ounces and milliliters indicated on the pitcher.
4. For best results, press the fruit for 15 seconds, release pressure and press fruit again to extract the maximum juice. The motor stops automatically when pressure is released or the fruit is lifted from the Reamer.

5. To pour, grip the handle, twist, and lift the pitcher up off the base. You can place the storage cover over the pitcher and place it in the refrigerator.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

TROUBLE SHOOTING CHART

Trouble	Reason	Check
Juicer does not run	No power supply	Check main supply
	If power supply found OK	Call USHA care 18001033111
Unit overheating	External heat source	Check and remove if any heat source nearby
	Uneven platform that blocks air vents	Place the blender on level surface
Juicer operational but no juice output	Fruit not pressed properly	Place the cut side of one half of fruit down over the reamer, press the fruit down for juicing action
	Pulp/seeds blocking the filter holes	Take the filter out and clean properly

NOTES

WARRANTY CARD

This appliance is warranted for two years against all manufacturing defects from the date of sale. In the event of any complaint contact the nearest Company Service Centre or call our Toll Free number 1800 1033 111.

THIS WARRANTY IS VALID ONLY WHEN

1. The appliance has not been opened or tampered with, by any unauthorized person.
2. The warranty card or cash memo duly signed by the authorized dealer is presented with the complaint.
3. The appliance has been installed, used and maintained in accordance with the instruction manual.

THIS WARRANTY DOES NOT APPLY FOR

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN, and such plastic, materials, rubber parts and cord.
3. Normal wear and tear of the parts of the appliance.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied

S.NO:_____

CASH MEMO:_____ DATE:_____

_____

DEALER'S NAME AND ADDRESS: _____

_____

OWNER'S NAME & ADDRESS: _____

_____

USHA care™

Toll free

1800-1033-111

Email: usha_care@ushainternational.com

http://www.facebook.com/ushainternational

USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurgaon - 122 001, Haryana (India) Tel : +91-124-4583100, Fax : +91-124-4583200
E-mail : usha_care@ushainternational.com Website : www.ushainternational.com
Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi (India) Tel : +91 11 23318114 Fax : +91 11 23318118

Fans • Sewing Machines • Home Appliances • Engines & Pumpsets• Electrical Motors & Pumps • Water Coolers & Dispensers • Inverters • Cook Tops, Hobs & Hoods • Auto Components

SHRIRAM®

USHA ® Registered Trademark and Copyright of USHA INTERNATIONAL LTD. SHRIRAM ® Registered Trademark of USHA INTERNATIONAL LTD.

ISO 9001: 2008
Certified Company