



# INSTRUCTION MANUAL

**HALOGEN HEATER**

**Model - HH 3303**





Dear Customer,

Congratulations!

You are now the proud owner of Usha Halogen Heater.

Innovatively designed, using only the highest quality material and components, your Usha Halogen Heater is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes

## IMPORTANT PRECAUTIONS

When using electrical appliance, basic safety precautions should always be followed including the following:


1. Remove all the packaging and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after sales service. Do not leave packaging materials like bags and staples within the reach of children.
2. Before switching on appliance check if the electrical Voltage and frequency of the circuit correspond to those indicated on the appliance.
3. Use the appliance only for the mentioned purpose, namely as a radiator for domestic use.  
Do not use it for any for any other application as it could get dangerous.
4. The use of every electrical appliance calls for the awareness of some basic rules, such as:
  - never touch the appliance with wet or damp hands or feet.
  - never expose the appliance to atmospheric conditions (rain, sun etc.)
5. The appliance must always be placed on a flat and stable surface.
6. Switch the appliance off and unplug it before cleaning.
7. When the appliance is not in use switch it off and unplug it. Keep out of the reach of children.
8. Do not use the radiator near bath tubs, showers, wash-basins or swimming pools (minimum distance 1 meter)
9. Do not put the cable on the appliance when it is still warm.
10. A correct operation of the appliance is obtained when the radiator is installed vertically. Do not switch on the heater near pieces of furniture, curtains, shelves etc.
11. Do not use the appliance near liquids or inflammable matters.
12. Never operate the appliance immediately below an outlet.
13. **ATTENTION:** Do not connect the appliance to a device switching the appliance automatically on such as a thermal control device or a time switch to avoid overwhelming risks when the radiator is moved or covered.
14. Do not cover the appliance when it is running to avoid overheating risks.



- 15. Do not connect the appliance to extension cords or multiple outlets.
- 16. Do not damage and do not kink the power cord.
- 17. Before cleaning the appliance or carrying out any maintenance switch off the whole system.

If the appliance is not functioning, switch it off without tampering it. If any repair is required please contact Usha Care.

### IDENTIFICATION OF PARTS

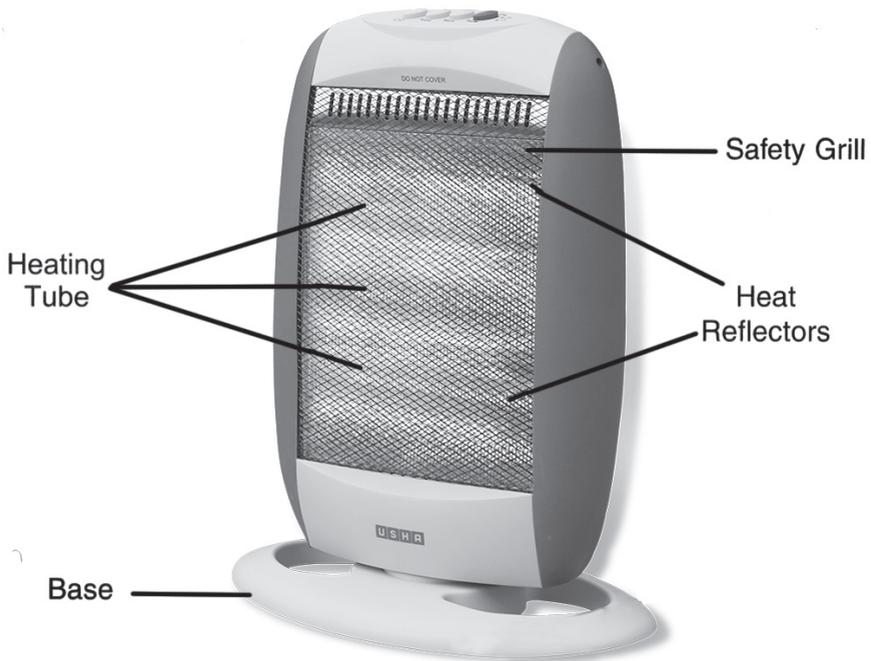


## TECHNICAL DATA

Model No.	HH 3303
Power Supply	230V, 50HZ Single Phase
Wattage	1200W
Power Select	400/800/1200W
Heating Tubes	3 Nos.
Safety Device	Tip Over Switch
Oscillation	Wide Angle Oscillation
Color	Grey

## COMPONENTS

1. Body frame
2. Base plate
3. Butterfly nut (2 pcs)
4. Tip-over safety switch rod
5. Power cord guide
6. Power cord
7. Switch

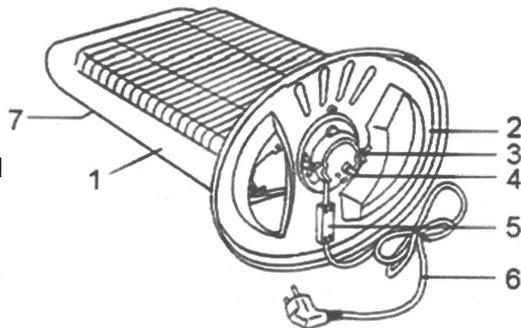

## ASSEMBLY

- Assemble the body frame and the base plate together as the following sequences.
- Remove the butterfly nuts from the lower part of the body frame.
- Insert the power cord through the slot placed in the middle part of the basement and then assemble the body frame to the base plate.
- Secure the body frame to the base plate by means of the two butterfly nuts previously removed. Insert the cord through the suitable slots and then fix it by the clamp.



## OPERATION

Plug in the appliance. Check that the outlet has at least 10 AMPERE current carrying capacity.

## SWITCHES

- Select the heating position by suitable switches. Press the oscillating switch to make the radiator oscillate. Press it again to switch off the oscillating movement of the appliance.
- The radiator can be activated manually by pressing the handle situated in the rear panel of the appliance.

## SAFETY DEVICE

This appliance is provided with two safety devices: the first device disconnects the appliance when the radiator is tilted or when is tipped by means of a switch situated in the lower part of the radiator. The second safety device disconnects the appliance in case of overheating by means of a thermal cut out.

## MAINTENANCE

- The appliance needs only an external regular cleaning.
- After use and before cleaning always unplug the appliance and wait till the item is cool.
- Clean the grills with a dry cloth.
- Do not clean the painted parts with emery flour or solvents and use only damp cloth.

In case of any defect do not tamper with the appliance yourself. Contact Usha Care.

**WARRANTY CARD**

This appliance is warranted for 1 year against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at Toll Free No. 1800 1033 111.

**The warranty is valid only when:**

- 1) The appliance has been installed, used and maintained in accordance with the instruction manual.
- 2) The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
- 3) The appliance has not been opened or tampered with, by any unauthorized person.

**This warranty does not apply for:**

- 1) Damages due to chipping, peeling, plating and denting.
- 2) Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
- 3) Normal wear and tear of parts.
- 4) Damage resulting from accidents, mishandling or negligence on part of the customer.

**Liability for consequential loss or damage is neither accepted nor implied.**

S.NO: \_\_\_\_\_

CASH MEMO \_\_\_\_\_ DATE: \_\_\_\_\_

DEALER'S NAME AND ADDRESS: \_\_\_\_\_  
\_\_\_\_\_

OWNER'S NAME & ADDRESS: \_\_\_\_\_  
\_\_\_\_\_

**USHA care™**

Toll free

1 800-1033-111

Email: [usha\\_care@ushainternational.com](mailto:usha_care@ushainternational.com)  
 <http://www.facebook.com/ushainternational>

## USHA INTERNATIONAL LTD.

Plot No.15, Institutional Area, Sector 32, Gurgaon - 122 001 (Haryana) Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail : [corporate@ushainternational.com](mailto:corporate@ushainternational.com) Website : [www.ushainternational.com](http://www.ushainternational.com)

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi (India) Tel : +91 11 23318114 Fax : +91 11 23318118



**SHRIRAM**

Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers  
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

**USHA**

® Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



® Registered Trademark of USHA INTERNATIONAL LTD.

ISO 9001:2008  
Certified Company